

CAT. #	PAGE	CAT. #	PAGE	CAT. #	PAGE	CAT. #	PAGE
DW411	85	DW756	100	DW918	19	DW3215-DW3232	141
DW411K	85	DW758	100	DW919	15	DW3310-DW3350	145
DW420	86	DW788	76	DW920K-2	24	DW3370-DW3372	144
DW421	85	DW802	94	DW9216	29	DW3508-DW3532	110
DW421K	85	DW802G	94	DW926K-2	23	DW3700-DW3778	122-123
DW423	85	DW818	94	DW933K	14	DW3970-DW3977	124
DW423K	85	DW821	94	DW934K-2	13	DW3981-DW3992	121
DW432	87	DW824	95	DW935K	19	DW3993-DW3996	124
DW433	87	DW827	95	DW936K	13	DW4418-DW4429	107
DW433K	87	DW828	95	DW937K	19	DW4432-DW4439	114
DW433KT	87	DW831	95	DW940K-2	22	DW4518-DW4554	107
DW443	86	DW840	96	DW941K-2	18	DW4532-DW4539	114
DW505	45	DW845	103	DW955K-2	23	DW4618-DW4629	107
DW505K	45	DW847	103	DW960K-2	11	DW4700-DW4773	116
DW511	45	DW849	103	DW965K-2	20	DW4719-DW4759	107
DW515K	45	DW870	99	DW966K-2	17	DW4801-DW4869	117-119
DW570K	47	DW871	99	DW968K-2	22	DW4900-DW4938	114
DW616	79	DW872	99	DW969K-2	17	DW4939-DW4990	115
DW616D	79	DW880	98	DW979K-2	22	DW4949-DW4999	107, 109
DW616K	79	DW882	98	DW999K-2	11	DW5204-DW5249	133
DW616M	79	DW887	98	<b>ACCESSORIES</b>		DW5348-DW5365	135
DW616PK	79	DW888	98	D18001-D180098	120-121	DW5400-DW5470	134-135
DW618	80	DW890	101	D5100-D5136	127	DW5700-DW5794	136
DW618B3	81	DW891	101	D6050	127	DW5740-DW5769	137
DW618D	80	DW892	101	D6100	127	DW5770-DW5786	140
DW618K	80	DW893	101	DW1169	128	DW5790-DW5794	136
DW618M	80	DW896	102	DW1204-DW1232	129	DW5801-DW5861	138
DW618PK	80	DW897	102	DW1263	129	DW5832-DW5847	140
DW621	81	DW898	102	DW1304-DW1332	129	DW5900-DW5945	139
DW621K	81	DW902	24	DW1363	129	DW5950-DW5967	140
DW625	81	DW904	22	DW1570-DW1595	125	DW7124-DW7296	141
DW660	53	DW9048	28	DW1602-DW1629	129	DW7605-DW7668	141-143
DW660K	53	DW9050	28	DW1630-DW1649	125	DW7737-DW7763	146
DW660SK	53	DW9057	28	DW1665-DW1692	126	DW8001-DW8016	110
DW670	83	DW906	19	DW1768-DW1782	126	DW8020-DW8039	112
DW673K	83	DW9061	28	DW1783-DW1796	123	DW8056-DW8059	110
DW680K	84	DW9062	28	DW1800-DW1808	121	DW8062-DW8086	111
DW682K	84	DW9071	28	DW1904-1932	128	DW8300-DW8330	113
DW703	71	DW9072	28	DW1956	128	DW8400-DW8486	108-109
DW705S	71	DW908	15	DW1969	128	DW8700-DW8725	111
DW706	71	DW9091	28	DW2001-DW2097	130-131	DW9052-DW9059	145
DW708	72	DW9094	28	DW2105-DW2163	130	DW9152-DW9158	145
DW712	72	DW9099	28	DW2190	129		
DW723	72	DW9107	29	DW2200-DW2263	130-131		
DW734	74	DW9109	29	DW2505-DW2574	132		
DW735	75	DW911	29	DW2602	130		
DW744S	74	DW9116	29	DW2700-DW2735	131		
DW746	76	DW9117	29	DW3103-DW3128	144		
DW746X	76	DW9118	29	DW3161-DW3193	145		

12. **Don't overreach.** Keep proper footing and balance at all times.
13. **Maintain tool with care.** Keep tools sharp and clean for better and safe performance. Follow instructions for lubricating and changing accessories. Inspect tool cords periodically and, if damaged, have repaired by an Authorized Service Center. Inspect extension cords periodically and replace if damaged. Keep handles dry, clean, and free from oil and grease.
14. **Disconnect tools** when not in use, before servicing, and when changing accessories, such as blades, bits, cutters.
15. **Remove adjusting keys and wrenches.** Form habit of checking to see that keys and adjusting wrenches are removed from tool before turning it on.
16. **Avoid unintentional starting.** Don't carry plugged-in tool with finger on switch. Be sure switch is off when plugged in.
17. **Outdoor use extension cords.** When tool is used outdoors, use only extension cords intended for use outdoors and so marked.
18. **Stay alert.** Watch what you are doing. Use common sense. Do not operate tool when tired.
19. **Check damaged parts.** Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding or moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an Authorized Service Center unless otherwise indicated elsewhere in this catalog. Have defective switches replaced by Authorized Service Center. Do not use tool if switch does not turn it on and off.
20. **Do not operate portable electric tools near flammable liquids or in gaseous or explosive atmospheres.** Motors in these tools normally spark, and the spark might ignite fumes.