


READ CAREFULLY BEFORE INSTALLING

TYPE "DL" SPRAY UNIT NOZZLE REPLACEMENT INSTRUCTIONS

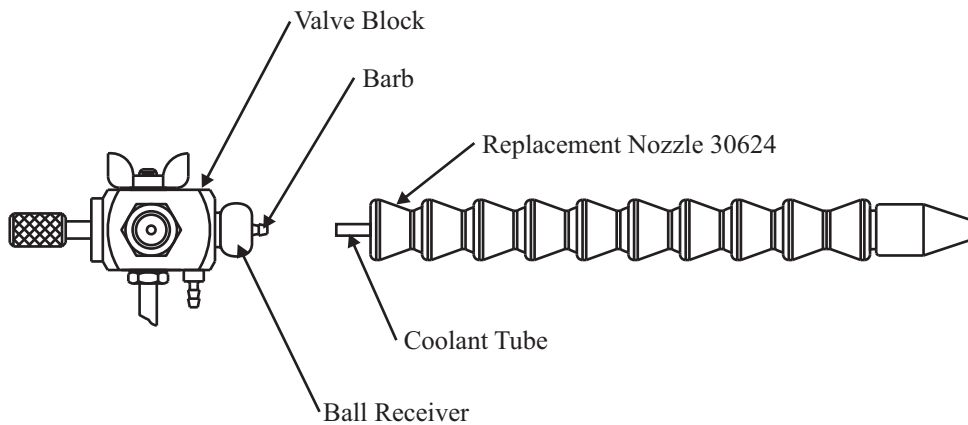


CAUTION

DISCONNECT THE AIR SUPPLY BEFORE SERVICING THIS UNIT

1. Remove the old nozzle by bending it sharply by the valve block.
2. Pull the coolant tube from the barb inside the ball receiver.
3. Take the replacement nozzle and push the coolant tube completely over the barb.
4. Snap the nozzle over the ball receive to complete replacement.

READ CAREFULLY BEFORE INSTALLING

TYPE "DL" SPRAY UNIT NOZZLE REPLACEMENT INSTRUCTIONS

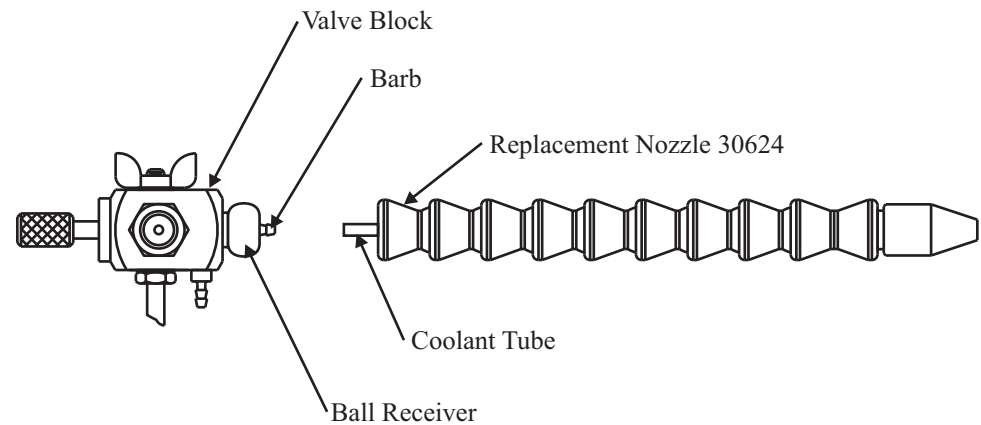

CAUTION

DISCONNECT THE AIR SUPPLY BEFORE SERVICING THIS UNIT

1. Remove the old nozzle by bending it sharply by the valve block.
2. Pull the coolant tube from the barb inside the ball receiver.
3. Take the replacement nozzle and push the coolant tube completely over the barb.
4. Snap the nozzle over the ball receive to complete replacement.